

INSTALLATION GUIDELINES FOR SISAL & COIR TILES


When installing natural floor covering, it is important to follow some basic guidelines. These materials are woven entirely from plant fiber and like most natural materials will expand and contract under different climate and moisture conditions, much like wood flooring. It is recommended the material be acclimated in the room where the tiles will be installed for 24-48 hours.

LOOSE INSTALLATION (*exhibition stands, temporary, etc*):

Installation without adhesive, but please pay attention to the fact that the stability of the tiles can change in humid circumstances.

PERMANENT INSTALLATION (*domestic, hobby room, showroom, etc*):

Installation with pressure sensitive adhesive, (ie. Ultrabond ECO 810 or 811) or contract grade pressure sensitive adhesive or tab. Start in the center of the room and expand to the outside.

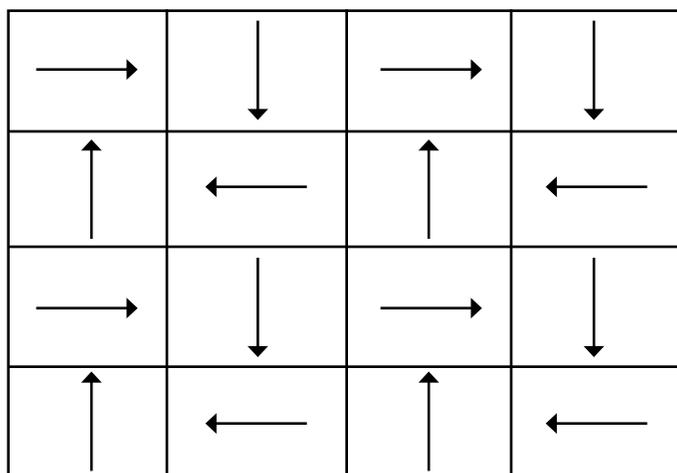

PLEASE NOTE: It is expected that all installers handling our materials, be familiar with the **CRI-104, minimum guidelines** for installing commercial carpeting. Many of those guidelines for direct glue down and double stick installation will prove helpful. We also recommend '**Certified**' installers with experience in flat-weave carpeting which requires more time and attention-to-detail for a successful installation. Prior to Installation, all material needs to be carefully inspected. All these products are made from '**natural**' fibers, containing various inherent irregularities synthetic fiber does not. We will not cover the cost of labor on visible claims, so it is important to inspect prior to investing your time. **Return Authorizations will only be considered on approved claims.**